


Visit www.copernicused.com to browse our entire line of educational aids

#### NOTE: Do not tighten any fasteners until the cart is completely assembled

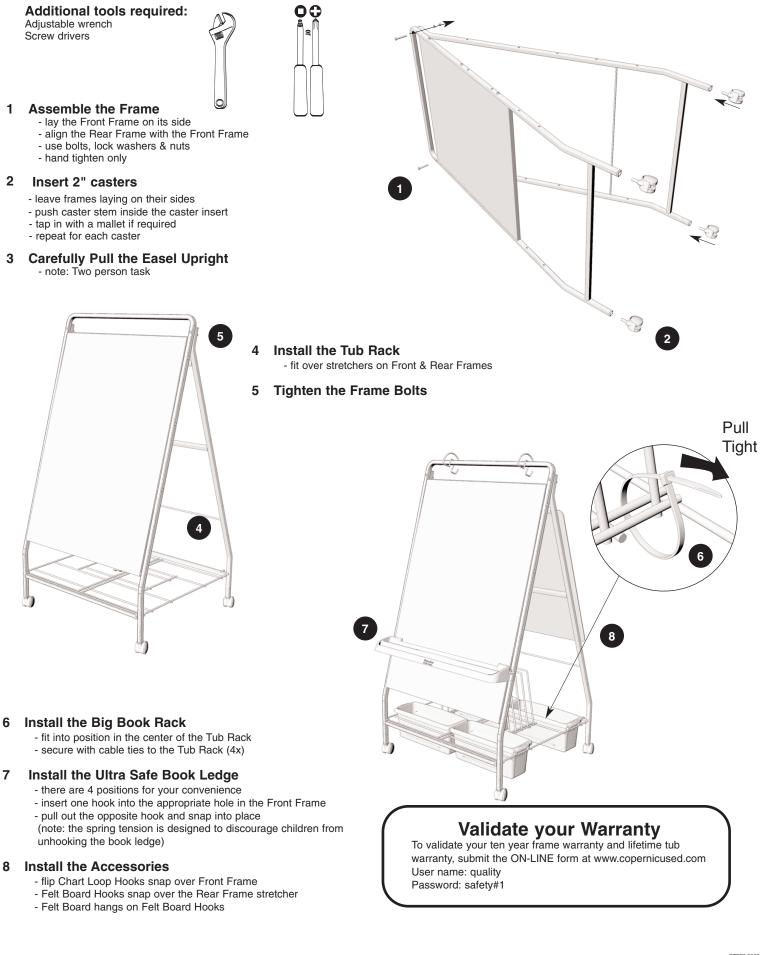

#### Before Use

- 1. Some boards are shipped with a protective plastic film to prevent scratches. Be sure to remove this film prior to writing on the surface.
- 2. Spray your board with a white board cleaner and wipe with a soft cloth. Rinse with water and dry with a soft dry cloth.

### User Tips

\*\*We highly recommend Expo® brand dry erase markers ("low odor" markers are best for using around children, but may not erase as easily as regular "high odor" markers).

#### DO

- Erase after every use with a clean dry soft cloth or eraser (eraser should be specifically designed for white boards)
- Use white board cleaner at least 2 to 3 times a week
- Replace your dry erase markers as needed to avoid "ghosting"

## DON'T

- Use abrasive erasers, cleaners, sponges or rags
- Use a chalkboard eraser
- Use a wet eraser
- Use permanent marker Keep them away from your white boards!

## **Tips to Remove Permanent Marker**

- 1. Using a dry erase marker, write over top of permanent marker. Let dry. Erase. Repeat a few times.
- 2. Use a white pencil eraser
- 3. With a very small amount of isopropyl alcohol (rubbing alcohol) on a soft cloth, clean stained area only. Rinse with water. Dry with soft cloth. Repeat a few times.
- 4. SoySafe<sup>™</sup> white board Cleaner & Restorer is also perfect for removing permanent marker stains. Copernicus item # AC405.
- 5. Paint thinner may also be used (by an adult only in a well ventilated area and not around children). Rub it off right away with a soft cloth and immediately clean the surface with a white board cleaner.



Educational Products Inc.

If any parts are missing or you experience problems, please call:

# 1-800-267-8494

Have your packing slip ready for reference

...making teaching a little easier or email info@copernicused.com

Keep these tips for future reference.



Dry Erase metal panel



Removable Dry Erase Board (WB63)



Removable Lined Dry Erase Board (WB65)